

 
 
 


 

 

 
 
 

 
 
 


 
 

 

 





 
 

 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Power Tv	 + 	Shift + Power
	TV/DVD		TV/R
	3D Surr		Dual
	PIP		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV






 

 
 
 

 

 



 


 

 
 
 
 
 
 
 
 
 
 
 
 
Originalfernbedienung Ersatzfernbedienung

	AV Tv	 + 	Shift + AV
	PR+ Tv		Ch +
	PR- Tv		Ch -
	Vol+ Tv		Vol +
	Vol- Tv		Vol -
	Mute Tv		Mute
	O)))/Audio	 + 	Shift + Dual
	[...]/Subtitle		Subt
	Camera/Angle		Options
	Rec		Rec
	Rec Mode	 + 	Shift + Rec
	Timer Rec		Blue
	<< Scan		<<
	Scan >>		>>
	I<< Skip		I<<
	Skip >>I		>>I
	Pause/Step		Pause





Originalfernbedienung Ersatzfernbedienung

	Play		Play
	Stop		Stop
	Home		Smart
	Menu/List		Menu
	Return		Back
	Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Lock/Timeshift		Shift + 3D
	Marker		Guide
	Search		Shift + TV/R
	Setup		D. Menu
	Dubbing		Shift + Options
	I.Skip		Shift + Subt

Originalfernbedienung Ersatzfernbedienung

	Title		Red
	CHP ADD		Sleep
	Thumbnail		Format
	Random		Media
	Repeat		Text
	A-B		Shift + Play
	Zoom		Shift + Eject
	Clear		Exit

