











 










Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-		Shift + Guide / EPG / -/-
	Recall		Back / Return
	Vol+		Vol+
	I/II/Audio		Audio / Lang I/II
	Auto		Smart / List

Originalfernbedienung Ersatzfernbedienung

	CH+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	Up		Up
	Left		Left
	OK/Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Source		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Play/Pause / Size		Zoom / Size
	Play/Pause / Size		Play / Slow



