

 

 

 











 
 
 

 
 
 
 




 



 

 
 

 


 




 
 


 
 








Originalfernbedienung Ersatzfernbedienung

 


 


 



 

 




 
 



 

 

 
 


	Standby		Power
	Open/Close		Eject
	Input Select		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Prog+		Ch +
	Prog-		Ch -
	Clear		Exit
	Mode		Format

Originalfernbedienung Ersatzfernbedienung

	Zoom		Shift + Eject
	OO/Audio		Dual
	Search		TV/R
	Repeat		Text
	Top Menu		Menu
	Disc Menu		D. Menu
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Return		Back
	Display		Info
	Instant Skip		Guide
	1.3x/0.8x Play		Subt
	Time Slip		Sleep
	Play		Play





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Stop		Stop				
	Pause		Pause				
	<<		<<				
	>>		>>				
	>>		>>				
	<<		<<				
	Rec		Rec				
	DVD		Green				
	VCR		Red				
	Dubbing		Blue				
	Sat Link		Media				
	Timer Set		3D				
	Timer Prog.		List				
	Rec Mode		Shift + Rec				
	Setup		Options				

