



Originalfernbedienung Ersatzfernbedienung

|   |         |   |       |
|---|---------|---|-------|
|    | Power   |    | Power |
|    | 1       |    | 1     |
|    | 2       |    | 2     |
|    | 3       |    | 3     |
|    | 4       |    | 4     |
|    | 6       |    | 6     |
|    | 5       |    | 5     |
|    | 7       |    | 7     |
|    | 8       |    | 8     |
|    | 9       |    | 9     |
|  | 0       |  | 0     |
|  | Vol+    |  | Vol + |
|  | Vol-    |  | Vol - |
|  | Mute    |  | Mute  |
|  | Repeat  |  | Text  |
|  | Shuffle |  | Media |
|  | Play    |  | Play  |

Originalfernbedienung Ersatzfernbedienung

|   |             |   |         |
|---|-------------|---|---------|
|    | Pause       |    | Pause   |
|    | Stop        |    | Stop    |
|    | >>          |    | >>      |
|    | <<          |    | <<      |
|    | >>          |    | >>      |
|    | <<          |    | <<      |
|    | Option      |    | Options |
|    | Display     |    | Info    |
|    | Enter       |    | Ok      |
|    | Up          |    | Up      |
|  | Down        |  | Down    |
|  | Right       |  | Right   |
|  | Left        |  | Left    |
|  | Folder Up   |  | Ch +    |
|  | Folder Down |  | Ch -    |
|  | Clear       |  | Exit    |
|  | Sleep       |  | Sleep   |



