
 

 
 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|--------|
|  | Power |  | Power |
|  | Open/Close |  | Eject |
|  | DVB/DVD |  | Smart |
|  | Audio |  | Dual |
|  | Clear/Media |  | Media |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | PBC/Menu |  | Menu |
|  | 10+ |  | Pre Ch |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|---------|
|  | SUB/MP3 |  | Subt |
|  | EPG/Program |  | Guide |
|  | Setup |  | Options |
|  | Enter |  | Ok |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | CH+ |  | Ch + |
|  | CH- |  | Ch - |
|  | I>/Step |  | Pause |
|  | Stop/Rec |  | Stop |
|  | Play/Pause |  | Play |



