


 



 
 


 

 

 



 



 

 













 














 


 

 

 

 



 














Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Source		AV
	Rec		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	Lang		Dual
	<<		<<
	>>		>>
	Text		Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv		TV/R
	Back		Shift + Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu		Menu
	Exit		Exit
	BACK		Back





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Q.Menu		D. Menu				
	O		Options				
	Music/Photo		Eject				
	* / o		Subt				
	* / Search		Sleep				
	Tv List		List				
	i		Info				
	[≡]		Guide				
	Size		Format				
	Vol+		Vol +				
	Vol-		Vol -				
	PR+		Ch +				
	PR-		Ch -				
	Mute		Mute				

