


















 







 






 




 

 
 

 
 











**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Play		Play / Slow
	<<		<< / Tune-
	>>		>> / Tune+
	Smart TV		Smart / List
	TV/Exit		Exit / Cancel / Clear
	Home		Menu / Home
	*		D.Menu / Top
	Tv Guide		Guide / EPG / -/--
	Source		AV / Input / RDS
	Search		Shift + Red / Netflix / Search
	[<>]		Picture / Format
	[[ ]]		TV/Radio /
	Red		Red / Netflix / Search









 
**Originalfernbedienung    Ersatzfernbedienung**

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Info		Info / Angle
	Options		Setup / OPT /
	Back		Back / Return
	Multiview		Zoom / Size
	List		Shift + Smart / List
	List		Display / Media
	Mute		Mute / Dimmer
	OK		OK
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Vol+		Vol+
	Vol-		Vol-





Originalfernbedienung Ersatzfernbedienung

	CH+		CH+ / Page+
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Subtitle		Subtitle / EQ
	Text		Text / Goto

Originalfernbedienung Ersatzfernbedienung