


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV	 + 	Shift + Pre Ch
	Recall		Pre Ch
	Game		Media
	Auto		Smart
	Info		Info





 
 

 



 


 


Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	EPG		Guide
	Exit		Exit
	Up / CH + / I<<		Up
	Down / CH - / >>I		Down
	Right / Vol +		Right
	Left / Vol -		Left
	OK		Ok
	Up / CH + / I<<		I<<
	Down / CH - / >>I		>>I
	Up / CH + / I<<		Ch +
	Down / CH - / >>I		Ch -
	Left / Vol -		Vol -
	Right / Vol +		Vol +
	Red / Zoom		Red
	Green / Lan/Audio		Green
	Yellow /		Yellow



Play/Pause



Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
TEXT 	Blue / Text		Blue				
ZOOM 	Red / Zoom		Eject				
LAN/AUDIO 	Green / Lan/Audio		Dual				
PLAY/PAUSE 	Yellow /		Play				
PLAY/PAUSE 	Yellow /		Pause				
TEXT 	Blue / Text		Text				
TV/RADIO 	<< / Tv/Radio		<<				
TV/RADIO 	<< / Tv/Radio		TV/R				
SUBTITLE 	>> / Subtitle		>>				
SUBTITLE 	>> / Subtitle		Subt				

