
















 



 





 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	Recall		Back / Return
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Info		Info / Angle

 



Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	EPG		Guide / EPG / -/-
	Exit		Exit / Cancel / Clear
	Up		Up
	CH+		CH+ / Page+
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	CH-		CH- / Page-
	Text		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Pause		Pause / Step / Freeze
	Tv/Radio		TV/Radio /





Originalfernbedienung   Ersatzfernbedienung   Originalfernbedienung   Ersatzfernbedienung

	Yellow	 REPEAT A-B	Yellow / YouTube / Repeat
	Blue	 RANDOM	Blue / Prime Video / Random

