



 



 
 
 
 

 




 



 





 
 

 



 


 

 

 

 


 

 
 




 

 

 

 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	VCR		Smart
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	Recall		Back
	Subtitle		Subt
	Auto		Media

Originalfernbedienung Ersatzfernbedienung

	Info		Info
	Menu		Menu
	EPG		Guide
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue





Originalfernbedienung Ersatzfernbedienung

	Zoom		Eject
	Lang/Audio		Dual
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Text		Text
	Tv/Radio		TV/R

Originalfernbedienung Ersatzfernbedienung

