

 
 


 



 





 



 

 


 
 
 


 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Info		Info
	Setup		Options
	Mute		Mute
	Menu		Menu
	Music		Media
	Copy		3D
	Zoom		Eject
	TV System		TV/R
	Source		AV
	Vol+		Vol +
	Vol-		Vol -
	Return		Back
	Home		Smart
	Up		Up
	Down		Down
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Timeshift		Sleep
	Goto		Pre Ch
	Rec		Rec
	Play		Play
	Stop		Stop





Originalfernbedienung Ersatzfernbedienung

PAUSE II	Pause	II	Pause
PREV II<<	I<<	II<<	I<<
NEXT II>>	>>I	II>>	>>I
FR II<<	<<	II<<	<<
FF II>>	>>	II>>	>>
SLOW I>/Slow	I>/Slow	PICTURE FORMAT	Format
A-B	A-B	E-MANUAL D.MENU	D. Menu
TIMER	Timer	SHIFT + TIMER AV	Shift + AV
RECLIST	Rec List	DISC NAV LIST	List
SUBTITLE	Subtitle	AD SUBT	Subt
REPEAT	Repeat	SHIFT + REPEAT TEXT	Shift + Text
AUDIO	Audio	SOUND DUAL	Dual
Red	Red	A	Red
EPG Green	Green	B	Green
TTX Yellow	Yellow	C	Yellow
Blue	Blue	D	Blue
TTX Yellow	TTX	REPEAT TEXT	Text

Originalfernbedienung Ersatzfernbedienung

EPG Green	EPG	-/- GUIDE	Guide

