
















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-----------------------|
|  | Power |  | Power |
|  | Sleep |  | Sleep / Timer |
|  | Top Menu |  | D.Menu / Top |
|  | Subtitle |  | Shift + Subtitle / EQ |
|  | Display |  | Display / Media |
|  | Setup |  | Setup / OPT / |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | Disc |  | Smart / List |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | >10/-/- |  | Guide / EPG / -/- |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|------------------|
|  | 0 |  | 0 |
|  | Pro Logic |  | Sound / Title |
|  | CH Select |  | TV/Radio / |
|  | Test |  | Text / Goto |
|  | Super SRND |  | Eject / Surround |
|  | Menu |  | Menu / Home |
|  | EQ |  | Subtitle / EQ |
|  | Up |  | Up |
|  | Shift Up |  | Shift + Up |
|  | Return |  | Back / Return |
|  | Super Sound EQ |  | CH+ / Page+ |
|  | Left |  | Left |
|  | Shift Left |  | Shift + Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Shift Right |  | Shift + Right |
|  | S.3D AI EQ |  | Zoom / Size |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|-----------------------------|
|  | Marker |  | Fav / Marker / PC |
|  | Down |  | Down |
|  | Shift Down |  +  | Shift + Down |
|  | Angle |  | Info / Angle |
|  | AV Effect |  | AV / Input / RDS |
|  | VCR (EXT)/VDP |  | Red / Netflix / Search |
|  | VCR (EXT)/VDP |  +  | Shift + 7 |
|  | VCR (EXT)/VDP |  +  | Shift + 4 |
|  | Tape / Deck1/2 |  +  | Shift + 5 |
|  | Tape / Deck1/2 |  | Green / APP / Repeat |
|  | DVD |  +  | Shift + 2 |
|  | DVD |  | Yellow / YouTube / Repeat |
|  | Tuner/Band |  | Blue / Prime Video / Random |
|  | Tuner/Band |  +  | Shift + 6 |
|  | Play Mode |  +  | Shift + Play / |
|  | Cancel |  | Exit / Cancel / Clear |
|  | </ |  | Pause / Step / Freeze |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|-------------------|
|  | Stop |  | Stop / Hold |
|  | Play |  | Play / Slow |
|  | Audio |  | Audio / Lang I/II |
|  | Mix 2CH |  | Picture / Format |
|  | Digital S.Woofer |  | CH- / Page- |
|  | << Search Slow |  | << / Tune- |
|  | >> Search Slow |  | >> / Tune+ |
|  | Muting |  | Mute / Dimmer |
|  | I<< Skip |  | I<< / Preset- |
|  | >>I Skip |  | >>I / Preset+ |
|  | Vol- |  | Vol- |
|  | Vol+ |  | Vol+ |

