 


 

 


 

 
 
 



 

 
 





 
 





Originalfernbedienung	Ersatzfernbedienung		
	Sleep		Sleep / Timer
	Power		Power
	Display		Display / Media
	Select		Shift + Sleep / Timer
	Set Clock/Timer		Menu / Home
	Tuner Memory		Rec / Rec Mode
	Play Mode/Tuning Mode		Shift + Play /
	Repeat/FM		Green / APP / Repeat
	Tape		5
	CD		3
	Band/Tuner		6
	Function		D.Menu / Top
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Play		Play / Slow

Originalfernbedienung	Ersatzfernbedienung		
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Clear		Exit / Cancel / Clear
	Vol+		Vol+
	Enter		OK
	EQ		Subtitle / EQ
	Vol-		Vol-
	Folder -		CH- / Page-
	Folder +		CH+ / Page+

