



 
 
 
 
 


 

 
 

 

 
 


 
 
 


 
 
 

 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Back		Back
	Audio		Dual
	Source		AV
	List		List
	EPG		Guide

Originalfernbedienung Ersatzfernbedienung

	Info/[≡i]		Info
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Exit		Exit
	Recall		Pre Ch
	Home		Shift + Smart
	≡		Shift + Media
	Internet		Media
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Radio/Audio+		TV/R





Originalfernbedienung Ersatzfernbedienung

	Smart Tv		Smart
	On/Off Mouse		Eject
	Timeshift/Audio-		Shift + TV/R
	Sleep/Zoom+		Sleep
	FAV/Zoom-		D. Menu
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	<<		<<
	>>		>>
	I<		I<<
	>I		>>I
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec

Originalfernbedienung Ersatzfernbedienung

	[≡]		Text
	[≡+]		Shift + Subt
	[≡?]		Options
	[≡◇]/[+]		Format
	[≡x]		3D
	[≡o]/Subtitle		Subt
	Index		Shift + Info

