










 



 





 



 



 





 

 




 



 

 





 




 

 

 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Shift + Power
	Mute		MUTE
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-- / 10+		-/-- / EPG
	Recall		BACK
	Source		SRC
	-[ /]- / P.STD		V-FOR

 
 
 

 
 
 


 
 
 
 
 
 
 

 
 

 

 

 

 
 
 

 



Originalfernbedienung Ersatzfernbedienung

	-[ ]- / S.STD		Shift + Audio
	Menu / ATV		MENU
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	OK		OK
	Vol +		VOL +
	Vol -		VOL -
	Program +		CH +
	Program -		CH -
	Info		INFO
	Setup / DVD /		VOD
	I/II		Audio
	[ / = ] / Text		TEXT
	Open / Close		Shift + P/C / FAV
	Play		Play





Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	Stop		Stop
	l<<		First
	>>l		Last
	<<		Rewind
	>>		Fast Forward
	[=x] / Exit		EXIT
	[=◆] / Title / EPG		Shift + -/- / EPG
	[=+] / Menu / FAV		P/C / FAV
	[=i] / Goto / Tv/R		TV/R
	[=?] / Slow Sub.		OPT+
	[=o] / Repeat / Timer		WIDE
	[= ] / Subtitle		Subt.
	Red		Red (A)
	Green		Green (B)
	Yellow		Yellow (C)
	Blue		Blue (D)

Originalfernbedienung Ersatzfernbedienung