



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Disp.Mode		Display / Media
	Dimmer	+	Shift + Mute / Dimmer
	Mute		Mute / Dimmer
	Preset/Folder Up		CH+ / Page+
	USB	+	Shift + 8
	Vol+		Vol+
	Preset/Folder		CH- / Page-
	Function		Menu / Home
	Vol-		Vol-
	Sleep		Sleep / Timer
	Play/Pause		Play / Slow
	Play		Up
	Pause		Pause / Step / Freeze
	Clock	+	Shift + Sleep / Timer
	<</I<<		<< / Tune-
	Tun.-		Left

Originalfernbedienung Ersatzfernbedienung

	Stop/Mo/St		OK
	Stop		Stop / Hold
	>>/>>I		>> / Tune+
	Tun.+		Right
	D.Skip		Yellow / YouTube / Repeat
	Repeat		Green / APP / Repeat
	Repeat		Down
	Program/Memo		TV/Radio /
	RDS		AV / Input / RDS
	PTY		Picture / Format
	PTY Search		Red / Netflix / Search
	EQ Master		Subtitle / EQ
	XDSS plus		Audio / Lang I/II
	XTS Pro		Sound / Title
	Random		Blue / Prime Video / Random
	1		1
	2		2





Originalfernbedienung Ersatzfernbedienung

3	3	CO - STB	3
4	4	VIDEO	4
5	5	TAPE	5
6	6	TUNER	6
MP3 Info	MP3 Info	ANGLE	Info / Angle
7	7	AUX - HDD	7
8	8	USB	8
9	9	BLUETOOTH	9
0	0	HDMI - BAT	0

Originalfernbedienung Ersatzfernbedienung

