



Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	Play		Play
	Stop		Stop
	Still/Pause		Pause
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Push/Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Menu/Guide		Guide
	Top Menu		Menu
	Return		Back
	Tool		Options
	>>I/Channel+		>>I

Originalfernbedienung Ersatzfernbedienung

	I<</Channel-		I<<
	>>/Tuning+		>>
	<</Tuning-		<<
	DVS/Stereo		Dual
	Display		Info
	Subwoofer Level+		Ch +
	Subwoofer Level-		Ch -
	Source Power		Shift + Power
	DVD/CD		Red
	FM/AM		Green
	AUX		Yellow
	iPod		Blue
	Home		Smart
	Net/USB		Media
	1		1
	2		2
	3		3





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
+10	+10	PRE-CH	Pre Ch
CLEAR	Clear	EXIT	Exit
HDMI	HDMI	+ APP MEDIA	Shift + Media
SLEEP	Sleep	PROG SLEEP	Sleep
CALL	Call	+ FAV PRE-CH	Shift + Pre Ch
PROGRAM	Program	+ PROG SLEEP	Shift + Sleep
REPEAT	Repeat	REPEAT TEXT	Text
RANDOM	Random	SEARCH TV/R	TV/R
STATUS	Status	TIMER AV	AV
TONE	Tone	DISC NAV LIST	List

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
AUDIO RDS	+ SOUND DUAL	+ SOUND DUAL	Shift + Dual
SUBTITLE / PTY	AD SUBT	AD SUBT	Subt
ANGLE / CT	ECO 3D	ECO 3D	3D
ZOOM / RT	ZOOM	ZOOM	Eject
SURROUND	PICTURE FORMAT	PICTURE FORMAT	Format
SURROUND	E-MANUAL D.MENU	E-MANUAL D.MENU	D. Menu
MEMO	REC MODE	REC MODE	Rec





Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	Source Power		Shift + Power
	Channel+		Ch +
	Channel-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung



