 

















 






















 




 




 
 
 







Originalfernbedienung Ersatzfernbedienung

	Info		Info / Angle
	Power		Power
	TV		TV/Radio /
	AV		AV / Input / RDS
	R		Shift + TV/Radio / Program
	F1		Shift + 1
	F2		Shift + 2
	F3		Shift + 3
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

 







 







Originalfernbedienung Ersatzfernbedienung

	0		0
	Blue/Video		Shift + 4
	Blue/Video		Blue / Prime Video / Random
	Yellow/Sound		Sound / Title
	Yellow/Sound		Yellow / YouTube / Repeat
	PR+		CH+ / Page+
	Up		Up
	White		Fav / Marker / PC
	Left		Left
	OK		OK
	Right		Right
	Green/Timer		Sleep / Timer
	Green/Timer		Green / APP / Repeat
	PR-		CH- / Page-
	Down		Down
	Red/Recall		Back / Return
	Red/Recall		Red / Netflix / Search





Originalfernbedienung    Ersatzfernbedienung

	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Pause		Pause / Step / Freeze
	Exit		Exit / Cancel / Clear
	Text		Text / Goto
	EPG		Guide / EPG / -/--
	Menu		Menu / Home

Originalfernbedienung    Ersatzfernbedienung