





































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	*(Left)		Shift + Left
	0		0
	*(Right)		Shift + Right
	[ ]/Picture		Picture / Format
	]/Sound		Sound / Title
	I-II		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Up/PR+		Up
	PR+		CH+ / Page+
	List		Smart / List
	Vol-		Vol-
	Left		Left
	OK		OK
	Right		Right
	Vol+		Vol+
	Sleep		Sleep / Timer
	Down/PR-		Down
	PR-		CH- / Page-
	P<P		Back / Return
	Tv/AV		AV / Input / RDS
	Tv/PC		TV/Radio /
	[<>]/ARC		Shift + Picture / Format
	Red		Red / Netflix / Search





**Originalfernbedienung    Ersatzfernbedienung**

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[≡]/Text		Text / Goto
	[.≡]/Mix		Shift + Text /
	[≡♦]/Size		Zoom / Size
	[≡i]/Index		Info / Angle
	[≡x]/Update		Rec / Rec Mode
	[≡o]/Time		Pause / Step / Freeze
	[≡?]/Reveal		Play / Slow
	[≡+]/Hold		Stop / Hold
	[■]/PIP		Display / Media
	[ :■]/Input		Shift + AV / Input / RDS
	[/■]/Swap		Shift + Back / Return
	PIP PR+		Shift + CH+ /
	[-■]/Position		Shift + Display / Media
	[.≡]/Mode		Shift + Smart / List

**Originalfernbedienung    Ersatzfernbedienung**

	* (Down)		Shift + Down
	PIP PR-		Shift + CH- /

