



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Quick OSD		Blue
	FL Select		List
	Open/Close		Eject
	Advanced Disc Review		TV/R
	AV Enhancer		AV
	Advanced		3D
	Sound		Sleep
	Picture Mode		Format
	Manual Skip		Smart
	Quick Replay		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Cancel		Exit
	I<< Skip		I<<
	Skip >>I		>>I
	<< Slow/Search		<<
	Slow/Search >>		>>
	Stop		Stop
	Pause		Pause
	Play		Play
	Top Menu/Direct Navigator		Shift + Menu
	Menu/Play List		Menu
	Functions		D. Menu
	Return		Back





Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Subtitle		Subt
	Angle/Page		Red
	Audio		Dual
	Play Mode	+	Shift + Play
	Play Speed		Yellow
	Zoom	+	Shift + Eject
	Setup		Options
	Group		Green

Originalfernbedienung Ersatzfernbedienung

