 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv		TV/R
	Recall		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	P+		Ch +
	P-		Ch -
	i		Info
	Menu		Menu
	Q.Menu		D. Menu
	Back		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	World		Media
	Music-Photo-Vide		Options
	Guide		Guide
	*/o		Format
	*/Q		3D





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Text		Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Lang.		Dual
	[≡]..		Subt
	[-o-]		Smart
<< button"/>	<<	<< button"/>	<<
	Pause		Pause
>> button"/>	>>	>> button"/>	>>
	Rec		Rec
	Play		Play
	Stop		Stop

