



 



 
 
 



 

 

 

 

 
 
 

 

 












 





 
 

 











 
 
 
 

 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Source		SRC
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Guide		-/-- / EPG
	Infos		INFO
	Mute		MUTE
	Vol +		VOL +
	Vol -		VOL -
	Format		V-FOR
	Prog +		CH +
	Prog -		CH -
	Red		Red (A)
	Green		Green (B)
	Yellow		Yellow (C)
	Blue		Blue (D)
	Menu		MENU
	Media		MEDIA
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	OK		OK
	Back		BACK
	Exit		EXIT
	AD		Audio





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Subtitle		Subt.
	Text		TEXT
	Radio		TV/R
	I<<		First
	<<		Rewind
	>>		Fast Forward
	>>I		Last
	Rec		Rec
	Stop		Stop
	Play		Play
	Pause		Pause

