



 

 

 

 

 

 


























 
 


 




 

 

 



 








 




**Originalfernbedienung Ersatzfernbedienung**

	Open/Close		Eject / Surround
	Sound Mode		Sound / Title
	Display		Display / Media
	Time		Sleep / Timer
	Text		Text / Goto
	Menu		Menu / Home
	Enter		OK
	Recall Scroll		Back / Return
	Input Up		CH+ / Page+
	Vol+		Vol+
	Input Down		CH- / Page-
	Vol-		Vol-
	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	Play		Play / Slow
	>>I		>>I / Preset+
	Stop		Stop / Hold

**Originalfernbedienung Ersatzfernbedienung**

	<<		<< / Tune-
	>>		>> / Tune+
	Quick Replay		Smart / List
	AMS		Red / Netflix / Search
	A-B		Yellow / YouTube / Repeat
	Repeat		Green / APP / Repeat
	Prog		TV/Radio /
	Cancel		Exit / Cancel / Clear
	Random		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8



