



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Mem		Rec / Rec Mode
	<< Scan		<< / Tune-
	Scan >>		>> / Tune+
	I<< Preset		I<< / Preset-
	Preset >>I		>>I / Preset+
	Open/Close		Eject / Surround
	Auto (Tuner)		TV/Radio /
	Input		AV / Input / RDS
	Info		Info / Angle
	Vol+		Vol+
	Vol-		Vol-
	1		1



































Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	REP/--		Green / APP / Repeat
	Speakers A/B		Yellow / YouTube / Repeat
	Dimmer		Shift + Mute / Dimmer
	<< Scan		Shift + << /
	Scan >>		Shift + >> /
	I<< Preset		Shift + I<< / Preset-
	>>I Preset		Shift + >>I / Preset+
	FM/AM (Tuner)		Shift + 6



























Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Dimmer		Shift + Mute / Dimmer
	REP/--		Green / APP / Repeat
	Play		Play / Slow
	Pause/Auto		Pause / Step / Freeze
	Stop/FM/AM		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

	Mem		Rec / Rec Mode
	<< Scan		<< / Tune-
	Scan >>		>> / Tune+
	Mute		Mute / Dimmer
	I<< Preset		I<< / Preset-
	Preset >>I		>>I / Preset+
	Vol+		Vol+
	Vol-		Vol-
	Standby		Power
	Info		Info / Angle
	Speakers A/B		Yellow / YouTube / Repeat

