


 
 

 

 
 
 

 



 
 
 
 
 

 

 

 

 

 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Picture		Format
	Sound		Shift + Dual
	Zoom		Eject
	Subtitle		Subt
	EPG		Guide
	FAV		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

 
Originalfernbedienung Ersatzfernbedienung

	0		0
	YouTube		Media
	Return / Back		Back
	Menu		Menu
	Source		AV
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Browser		Shift + Media
	Enter		Ok
	Exit		Exit
	Vol +		Vol +
	Home		Smart
	Vol -		Vol -
	CH +		Ch +
	CH -		Ch -

 
 




Originalfernbedienung Ersatzfernbedienung

	Rec		Rec
	CHN List		List
	Info		Info
	Play / Pause / Index		Play
	Play / Pause / Index		Pause
	<< / Reveal		<<
	>> / Mix		>>
	Stop / Cancel		Stop
	I<< / Size		I<<
	>>I / Sub-page		>>I
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	MTS / I/II		Dual
	Text / C.C.		Text
	Freeze / Hold		3D

Originalfernbedienung Ersatzfernbedienung

	PVR List		Options
	Quick		D. Menu
	AD		Shift + Subt
	TV / Radio		TV/R
	Sleep		Sleep

