







 
 
 





 

 
 




 

 





 




**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	HDMI Control		D. Menu
	Record		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	I<<		I<<
	<<		<<
	>>		>>
	>>I		>>I
	Screen		Format
	Lang		Dual
	Subtitle		Subt
	Internet		Media
	Red/Zoom/↑		Red
	Green/Repeat/↓		Green
	Yellow / Root		Yellow

**Originalfernbedienung Ersatzfernbedienung**

	Blue / Title		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Swap		Pre Ch
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Originalfernbedienung Ersatzfernbedienung

OK	Ok	OK	Ok
+ P/CH	P/Ch+	+ CH	Ch +
- P/CH	P/Ch-	- CH	Ch -
+ Vol	Vol+	+ VOL	Vol +
- Vol	Vol-	- VOL	Vol -
MUTE	Mute	MUTE	Mute
MENU	Menu	TOP MENU MENU	Menu
SOURCE	Source	TIMER AV	AV
RETURN	Return	RETURN BACK	Back
EPG	Epg	-/-- GUIDE	Guide
INFO	Info	DISPLAY INFO	Info
SLEEP	Sleep	PROG SLEEP	Sleep
3D	3D	ECO 3D	3D
SEARCH MODE	Search Mode	SEARCH TV/R	TV/R
Music/Movie/Phot	Music/Movie/Phot	HOME SMART	Smart
Display	Display	SHIFT + DISPLAY INFO	Shift + Info
Presets	Presets	SETTINGS OPT	Options

Originalfernbedienung Ersatzfernbedienung