



















 





















 







 











 



 





## Originalfernbedienung Ersatzfernbedienung

|   |       |   |                  |
|---|-------|---|------------------|
|    | Power |    | Power            |
|    | 1     |    | 1                |
|    | 2     |    | 2                |
|    | 3     |    | 3                |
|    | 4     |    | 4                |
|    | 5     |    | 5                |
|    | 6     |    | 6                |
|    | 7     |    | 7                |
|    | 8     |    | 8                |
|    | 9     |    | 9                |
|   | 0/AV  |   | AV / Input / RDS |
|  | 0/AV  |  | 0                |
|  | Up    |  | Up               |
|  | P+    |  | CH+ / Page+      |
|  | Right |  | Right            |
|  | Vol+  |  | Vol+             |
|  | Left  |  | Left             |

## Originalfernbedienung Ersatzfernbedienung

|   |                  |   |                             |
|---|------------------|---|-----------------------------|
|    | Vol-             |    | Vol-                        |
|    | OK               |    | OK                          |
|    | Down             |    | Down                        |
|    | P-               |    | CH- / Page-                 |
|    | i                |    | Info / Angle                |
|    | Format / Picture |    | Picture / Format            |
|    | TXT              |    | Text / Goto                 |
|    | Mute             |    | Mute / Dimmer               |
|    | Red/AKT          |    | Red / Netflix / Search      |
|    | Green/Timer      |    | Sleep / Timer               |
|   | Green/Timer      |   | Green / APP / Repeat        |
|  | Yellow/[ I ]     |  | Yellow / YouTube / Repeat   |
|  | Blue/[ ++ ]      |  | Blue / Prime Video / Random |
|  | -O               |  | << / Tune-                  |
|  | O+               |  | >> / Tune+                  |
|  | -*               |  | I<< / Preset-               |
|  | *+               |  | >>I / Preset+               |










































 














 

 







 

 








**Originalfernbedienung    Ersatzfernbedienung**

|   |       |   |                  |
|---|-------|---|------------------|
|    | Power |    | Power            |
|    | 1     |    | 1                |
|    | 2     |    | 2                |
|    | 3     |    | 3                |
|    | 4     |    | 4                |
|    | 5     |    | 5                |
|    | 6     |    | 6                |
|    | 7     |    | 7                |
|    | 8     |    | 8                |
|    | 9     |    | 9                |
|   | 0/AV  |   | AV / Input / RDS |
|  | 0/AV  |  | 0                |
|  | P+    |  | CH+ / Page+      |
|  | Up    |  | Up               |
|  | Right |  | Right            |
|  | Vol+  |  | Vol+             |
|  | Left  |  | Left             |

**Originalfernbedienung    Ersatzfernbedienung**

|   |                  |   |                             |
|---|------------------|---|-----------------------------|
|    | Vol-             |    | Vol-                        |
|    | OK               |    | OK                          |
|    | P-               |    | CH- / Page-                 |
|    | Down             |    | Down                        |
|    | i                |    | Info / Angle                |
|    | Format / Picture |    | Picture / Format            |
|    | TXT              |    | Text / Goto                 |
|    | Mute             |    | Mute / Dimmer               |
|    | Red/AKT          |    | Red / Netflix / Search      |
|    | Green/Timer      |    | Green / APP / Repeat        |
|   | Green/Timer      |   | Sleep / Timer               |
|  | Yellow/[ I ]     |  | Yellow / YouTube / Repeat   |
|  | Blue/[ ++ ]      |  | Blue / Prime Video / Random |
|  | -O               |  | << / Tune-                  |
|  | O+               |  | >> / Tune+                  |
|  | -*               |  | I<< / Preset-               |
|  | *+               |  | >>I / Preset+               |





