

 

 

 



 

 



 

 













 

 

 

 





 

 

 


 


 
 





 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Mute		Mute / Dimmer
	Mode		AV / Input / RDS
	1		1
	2		2
	3		3
	Eject/Nicam2		Eject / Surround
	Eject/Nicam2		Sound / Title
	4		4
	5		5
	6		6
	TXT/MIX		Text / Goto
	Play/Pause		Play / Slow
	Play/Pause		Pause / Step / Freeze
	7		7
	8		8





 





 

 





 

 

 

 

 
 
 

 



Originalfernbedienung Ersatzfernbedienung

	9		9
	Stop/Exit/Cancel		Exit / Cancel / Clear
	Stop/Exit/Cancel		Stop / Hold
	-/--		Guide / EPG / -/--
	0		0
	Back		Back / Return
	SYS Menu		Menu / Home
	Rec		Rec / Rec Mode
	Up		Up
	CH+		CH+ / Page+
	DTV/Radio		TV/Radio /
	Left		Left
	Enter		OK
	Right		Right
	Vol-		Vol-
	Down		Down
	CH-		CH- / Page-

 

 





 

 

 

 



 

 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Return		Shift + Back / Return
	Menu DVD		D.Menu / Top
	Setup		Setup / OPT /
	Display		Display / Media
	Search/FAV		Shift + Red / Netflix /
	Search/FAV		Fav / Marker / PC
	Slow/EPG		Shift + Play /
	Slow/EPG		Shift + Guide / EPG / -/-
	Language/Info		Audio / Lang I/II
	Language/Info		Info / Angle
	Zoom/List		Zoom / Size
	Zoom/List		Smart / List
	Red/Angle		Red / Netflix / Search
	Red/Angle		Shift + Info / Angle
	Green/Program		Green / APP / Repeat
	Green/Program		Shift + TV/Radio / Program

Originalfernbedienung Ersatzfernbedienung

	Yellow/Repeat		Shift + Green / APP /
	Yellow/Repeat		Yellow / YouTube / Repeat
	Blue/A-B		Blue / Prime Video / Random
	Blue/A-B		Shift + Yellow / YouTube /
	<</Hold		Shift + Stop /
	<</Hold		<< / Tune-
	>>/Index		>> / Tune+
	I<</Size		I<< / Preset-
	I<</Size		Shift + Zoom /
	>>I/Reveal		>>I / Preset+
	Subtitle		Subtitle / EQ
	Title/Subpage		Shift + Sound / Title
	FAV-		Shift + Down
	FAV+		Shift + Up

