 
 







 




 
 

 
 

 
 
 
 
 

 

 







Originalfernbedienung	Ersatzfernbedienung
 Power	 Power
 Tv Power	 Shift + Power
 Source	 AV
 Auto Power	 Sleep
 Speaker	 Pre Ch
 Tv Source	 Shift + AV
 Repeat	 Text
 Any net	 Media
 Soundshare	 Dual
 Tv Vol+	 Shift + Vol +
 Tv Vol-	 Shift + Vol -
 Tv CH+	 Ch +
 Tv CH-	 Ch -
 Audio Sync+	 3
 Audio Sync-	 6
 Tv Mute	 Shift + Mute
 Tv Info	 Info

Originalfernbedienung	Ersatzfernbedienung
 Tv Pre-CH	 Back
 Dimmer	 0
 I<<	 I<<
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 >>I	 >>I
 Sound Effect	 Menu
 Smart Volume	 Smart
 3D Sound Plus	 3D
 DRC	 Subt
 Right S/W Level	 Right
 Left S/W Level	 Left
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

