
 
 

 

 


 

 
 


 


 
 

 




 



 
 
 



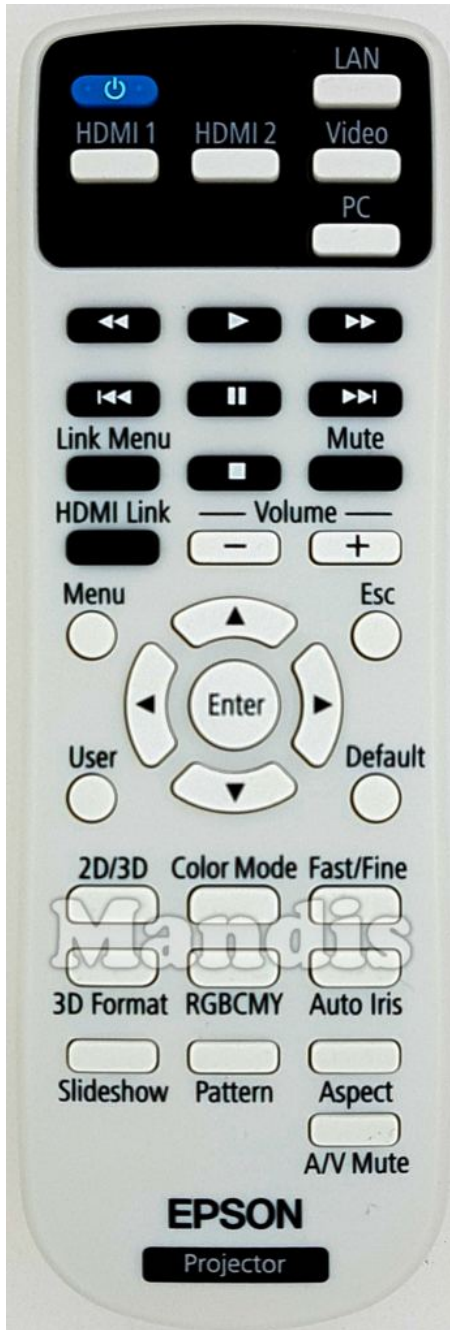 
Originalfernbedienung Ersatzfernbedienung

	Power		On
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute / Focus
	Menu		Menu / Info
	Esc		Exit / Lamp
	Default		Pict / Freeze
	Up		Up
	Down		Down
	Enter		OK
	Right		Right
	Left		Left
	LAN		0 / Lan
	Video		8 / Video
	PC		K.S. / PIP
	HDMI 1		2
	HDMI 2		3

Originalfernbedienung Ersatzfernbedienung

	HDMI Link		9 / HDMI
	Link Menu		Shift + Menu /
	Color Mode		Auto / Mode
	Fast/Fine		-- / USB
	3D Format		7 / S-Vid
	RGBCMY		4 / VGA1
	Auto Iris		Hide / Blank
	Slideshow		SRC / Search
	Pattern		1 / Point
	2D/3D		5 / VGA2
	User		6 / Comp
	Aspect		Aspect / Re-Sync
	A/V Mute		Shift + Mute / Focus
	<<		Shift + 1 / Point
	Play		Shift + 2
	>>		Shift + 3
	<<		Shift + 4 / VGA1





Originalfernbedienung Ersatzfernbedienung

	Pause	+	Shift + 5 / VGA2
	>>	+	Shift + 6 / Comp
	Stop	+	Shift + 8 / Video

Originalfernbedienung Ersatzfernbedienung

