




 
 








 


 

 

 




 
 

 
 
 



Originalfernbedienung Ersatzfernbedienung

	Step		Power
	Search		TV/R
	Mute		Mute
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide
	Display		Info
	Subtitle		Subt

Originalfernbedienung Ersatzfernbedienung

	Angle		Red
	Audio		Dual
	Menu PBC		Menu
	Title		3D
	Mode		Exit
	Setup		Options
	Vol+		Vol +
	Vol-		Vol -
	Repeat		Text
	Slow		Format
	Program		Sleep
	Zoom		Eject
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok



