
















 





 
 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Repeat		Text
	A-B	 + 	Shift + Text
	Open / Close		Eject
	N / P		TV/R
	Subtitle		Subt
	Angle		Format
	Language		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

**Originalfernbedienung    Ersatzfernbedienung**

	0		0
	10+		Guide
	Time		AV
	Setup		Options
	Title		Media
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	PBC		Smart
	Menu		Menu
	Vol -		Vol -
	Vol +		Vol +
	Zoom	 + 	Shift + Eject
	Return		Back
	L / R	 + 	Shift + Dual





**Originalfernbedienung Ersatzfernbedienung**

	Step	 + 	Shift + Pause
	Slow	 + 	Shift + Play
	Clear		Exit
	Program		Sleep
	Mute		Mute
	Display		Info
	Prev I<<		I<<
	Next >>I		>>I
	Rev <<		<<
	Fwd >>		>>
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	V-Mode		3D

**Originalfernbedienung Ersatzfernbedienung**