 

 
 
 
 
 

 




 

 


 


 






Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	1/5Beam		1
	2/ST+3Beam		2
	3/3Beam		3
	4/Stereo		4
	5/Target		5
	6		6
	7/Music		7
	8/Movie		8
	9/Vol Mode		9
	0/Sports		0
	+10/Off		Guide / EPG / -/--
	Surround		Eject / Surround
	Up		Up
	Down		Down
	Right		Right
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	AUX		Smart / List
	Enter		OK
	Menu		Menu / Home
	Return		Back / Return
	Test		Text / Goto
	CH Level		Info / Angle
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	(o)		Sound / Title
	Input Mode		AV / Input / RDS
	Sleep		Sleep / Timer
	Power AUX		Shift + Power
	1 AUX		Shift + 1
	2 AUX		Shift + 2
	3 AUX		Shift + 3
	4 AUX		Shift + 4





Originalfernbedienung Ersatzfernbedienung

TARGET	5 AUX	+	Shift + 5
	6 AUX	+	Shift + 6
MUSIC	7 AUX	+	Shift + 7
MOVIE	8 AUX	+	Shift + 8
VOL. MODE	9 AUX	+	Shift + 9
SPORTS	0 AUX	+	Shift + 0

Originalfernbedienung Ersatzfernbedienung

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Tv Vol+		Vol+
	Tv Vol-		Vol-
	Tv Input		AV / Input / RDS
	Tv Mute		Mute / Dimmer

 



Originalfernbedienung Ersatzfernbedienung

	Input 1		Smart / List
	Input 2		Display / Media

 



 

 


 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide / EPG / -/--
	Menu		Menu / Home
	Return		Back / Return
	Play		Play / Slow
	<<		<< / Tune-
	>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	STB		Shift + 3





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
POWER	Power	POWER	Power				
5BEAM	1	TV	1				
ST+3BEAM	2	DVD	2				
3BEAM	3	CD - STB	3				
STEREO	4	VIDEO	4				
TARGET	5	TAPE	5				
	6	TUNER	6				
MUSIC	7	AUX - HDD	7				
MOVIE	8	USB	8				
VOL. MODE	9	BLUETOOTH	9				
SPORTS	0	HDMI - SAT	0				
Play	Play	SLOW	Play / Slow				
<<	<<	TUNE-	<< / Tune-				
>>	>>	TUNE+	>> / Tune+				
Stop	Stop	HOLD	Stop / Hold				
Pause	Pause	STEP - FREEZE	Pause / Step / Freeze				

