 
 


 





 









 

 









 

 



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	><>		Shift + Menu
	Source		AV
	I - II		Dual
	Subtitles		Subt
	[ i+ ]		Info
	[ ? ]		D. Menu
	Mix		TV/R
	Zoom		Eject
	Time		Shift + AV
	[ PP ]		Back
	DNR		Options
	Mosaic		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left

**Originalfernbedienung Ersatzfernbedienung**

	Red / Menu		Red
	Red / Menu		Shift + Format
	Green / Menu		Green
	Green / Menu		Shift + Dual
	Yellow / Other		Yellow
	Yellow / Other		Menu
	Blue / OK		Blue
	Blue / OK		Ok
	Special Audio		Shift + Subt
	Text		Text
	P -		Ch -
	P +		Ch +
	Vol -		Vol -
	Vol +		Vol +
	1		1
	2		2
	3		3





Originalfernbedienung    Ersatzfernbedienung

4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
	Mute	MUTE	Mute
	P < P	FAV PRE-CH	Pre Ch
	Format	PICTURE FORMAT	Format
	Freeze	II	Pause
	Smart Controls Picture	HOME SMART	Smart
	Smart Controls Audio	APP MEDIA	Media

Originalfernbedienung    Ersatzfernbedienung




 








 


 
 
 
 

 
 





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Time		TV/R
	Zoom		3D
	Mix		Text
	[?]		Shift + Info
	[i+]		Info
	Freeze/Rec		Pause
	Format/Stop		Format
	Source		AV
	I-II		Dual
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Rec		Rec
	<<		<<
	>>		>>

**Originalfernbedienung    Ersatzfernbedienung**

	Stop		Stop
	Play		Play
	Timer		Shift + AV
	P-		Ch -
	P +		Ch +
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-		Guide

