 

 
 




Originalfernbedienung Ersatzfernbedienung


 
 
 


 

 












	Power		Power
	Source		AV
	[+]		3D
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Stop		Stop
	Play		Play
	Pause		Pause
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Repeat		Shift + Text
	Audio		Dual
	Guide		Guide

Originalfernbedienung Ersatzfernbedienung

	[i+]/[?]		Info
	Return		Back
	Zoom		Eject
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	9		9				
	0		0				
	FAV	 + 	Shift + Pre Ch				
	[≡]		Text				
	[...]		Subt				
	Vol+		Vol +				
	Vol-		Vol -				
	Mute		Mute				
	Prog+		Ch +				
	Prog-		Ch -				
	Recall		Pre Ch				

