

 



 
 





 
 

 


 
 
 

 













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TXT		Text
	EPG		Guide
	Input		AV
	Menu		Menu
	[>]		Format
	Lang		Dual
	Subt		Subt
	i		Info
	Exit		Exit
	Q.Menu		D. Menu
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok

Originalfernbedienung Ersatzfernbedienung

	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	[+]		3D
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7



