





 

 

 



 

 




 

 

 



 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	CH. List		Smart
	Back		Back
	P.Mode		Format
	S.Mode		Dual
	Sleep		Sleep




Originalfernbedienung Ersatzfernbedienung

	Info		Info
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	CH +		Ch +
	CH -		Ch -
	Exit		Exit
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	TV / Radio		TV/R
	FAV		Pre Ch
	Text		Text
	Audio		Shift + Dual


 






Originalfernbedienung Ersatzfernbedienung

	EPG		Guide
	Sub.T		Subt
	Reveal		3D
	Hold		Options
	Index		Media
	Sub.PG		Shift + Subt
	Rec		Rec
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	Size		Eject
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Red		Red
	Green		Green

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue

