







 



 

 
 
 






 











 

 


 




 
 
 

 
 


 
 
 






 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Play / Pause		Play
	Play / Pause		Pause
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	I<<		I<<
	>>I		>>I
	Vol-		Vol -
	Vol+		Vol +
	Home		Smart
	Back		Back
	Menu		Menu
	Mouse		Media
	1		1
	2		2

Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Mute		Mute
	Delet		Exit
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left

