






















 

 











**Originalfernbedienung Ersatzfernbedienung**

 

 
 
 

 

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	AV/TV		AV
	Swap		Pre Ch
	16:9		Format
	i		Info

**Originalfernbedienung Ersatzfernbedienung**

	TV/TXT		Text
	Menu		Menu
	Update		Media
	Mix		Dual
	PR+		Ch +
	PR-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Red		Red
	Green		Green
	Yellow/Timer		Yellow
	Blue/PP		Blue





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	SUB		Subt
	DOUB		TV/R
	REV		3D
	Stop		Stop

