 

 

 



 

 









 



 



 

 

 





**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Source		AV / Input / RDS
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	WWW./Browser		Smart / List
	Refresh		Back / Return
	Home		Shift + Menu /
	TXT/Mix		Text / Goto
	Stop		Stop / Hold
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	Screenshot		Guide / EPG / -/-
	<</Index		<< / Tune-
	>>/Hold		>> / Tune+
	I<</Reveal		I<< / Preset-

**Originalfernbedienung    Ersatzfernbedienung**

	>> /Cancel		>>  / Preset+
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Size		Zoom / Size
	Down		Down
	*/Set		Setup / OPT /
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	Tv/Radio		TV/Radio /



