




 



 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	VCR/DVD		Media
	DVD Timer		Green
	VCR Timer		Red
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AUX		0
	X/Cancel		Exit
	Showview/Video Plus+		Guide
	Prog/Check		Sleep

Originalfernbedienung Ersatzfernbedienung

	Display		Info
	On Screen/Progressiv		3D
	Top		Shift + Menu
	Menu		Menu
	Set Up		Options
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	I<</Previous		I<<
	>>I/Next		>>I
	<</Slow-		<<
	Play/Select		Play
	>>/Slow+		>>
	Stop/Clear		Stop





Originalfernbedienung Ersatzfernbedienung



 


	Pause		Pause
	Rec		Rec
	Remain/Rec	+	Shift + Rec
	←		Pre Ch
	→		Blue
	Angle/Live Check		AV
	Subtitle		Subt
	TV/DVD-TV/VCR		TV/R
	Mute/Audio		Mute
	PR+		Ch +
	PR- TV/CBL/DVD		Ch -
	Vol+ Tv		Vol +
	Vol- Tv		Vol -

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	VCR/DVD		Media
	DVD Timer		Green
	VCR Timer		Red
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AUX		0
	X/Cancel		Exit
	Memory/Mark		Smart
	Showview/Video Plus+		Guide

Originalfernbedienung Ersatzfernbedienung

	Prog/Check		Sleep
	Display		Info
	On Screen/Progressiv		3D
	Top		Shift + Menu
	Menu		Menu
	Set Up		Options
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	I<</Previous		I<<
	>>/Next		>>I
	<</Slow-		<<
	Play Select		Play
	>>/Slow+		>>





Originalfernbedienung Ersatzfernbedienung

 

 

 

	Stop/Clear		Stop
	Pause		Pause
	Rec		Rec
	Remain/Rec		Shift + Rec
	↔		Pre Ch
	→		Blue
	Angle/Live Check		AV
	Subtitle		Subt
	TV/DVD-TV/VCR		TV/R
	Mute/Audio		Mute
	PR+		Ch +
	PR- TV/CBL/DVD		Ch -
	Vol+ Tv		Vol +
	Vol- Tv		Vol -

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	VCR/DVD		Media
	DVD Timer		Green
	VCR Timer		Red
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AUX		0
	Prog/Check		Sleep
	Display		Info
	Top		Shift + Menu

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	I<</Previous		I<<
	>>/Next		>>I
	<</Slow-		<<
	Play/Select		Play
	>>/Slow+		>>
	Stop/Clear		Stop
	Pause		Pause
	Rec		Rec
	Remain/Rec		Shift + Rec
			Pre Ch
			Blue





Originalfernbedienung Ersatzfernbedienung

	Angle/Live Check		AV
	Subtitle		Subt
	PR+		Ch +
	PR- TV/CBL/DVD		Ch -
	Vol+ Tv		Vol +
	Vol- Tv		Vol -

Originalfernbedienung Ersatzfernbedienung

