
 
 



 
 

 
 


 



 



 
 


 

 


 





 
 


 




 


 
 









 





 





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Smart	Menu Off	 Exit
Reveal	 List	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 +  Shift + Info	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Originalfernbedienung Ersatzfernbedienung

8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue
Rotate Text		Shift + Text
Audio-		Shift + Left
Audio+		Shift + Right
Off/Tim		Pause
On/Tim		Play
Color+ P.Std		Format
Aft/Caf		Options
Game Coo		Shift + Eject

Originalfernbedienung Ersatzfernbedienung

Tune-		<<
Tune+		>>
Store		3D
Tone-		Shift + Down
Color- S.Std		Shift + Dual
Browse		Media
Tone+		Shift + Up
Bright+ Mode		Shift + Menu
Search		Shift + TV/R
Contrast+		Shift + Ch +
Contrast-		Shift + Ch -
On Pip		Shift + 1
Swap		Shift + 2
Rotate Pip		Shift + 3
Surround		Shift + Red
Nicam/Mono		Shift + Green
Level L		Shift + Yellow



