

 


 







 

 

 

 












 


 













 

 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	EPG		Guide / EPG / -/--
	REP		TV/Radio /
	Mute		Mute / Dimmer
	Rec List		Shift + Rec / Rec Mode
	CH List		Smart / List
	Subtitle		Subtitle / EQ
	Eject		Eject / Surround
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	<<		<< / Tune-
	>>		>> / Tune+
	Source		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Display		Display / Media
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Originalfernbedienung    Ersatzfernbedienung

0	0	HDMI - BAT	0
[CALLBACK]	Recall	[RETURN]	Back / Return
[FAV]	Fav	[PC FAV MARKER]	Fav / Marker / PC
[VOL +]	Vol +	[+]	Vol+
[PICTURE]	Picture	[FORMAT]	Picture / Format
[NICAM/A2]	Nicam / A2	[LANG I/II]	Audio / Lang I/II
[CH +]	CH +	[+]	CH+ / Page+
[VOL -]	Vol -	[VOL -]	Vol-
[SOUND]	Sound	[SOUND]	Sound / Title
[SLEEP]	Sleep	[TIMER]	Sleep / Timer
[CH -]	CH -	[CH PAGE -]	CH- / Page-
[RED]	Red	[NETFLIX SEARCH]	Red / Netflix / Search
[GREEN]	Green	[APP REPEAT]	Green / APP / Repeat
[YELLOW]	Yellow	[YouTube REPEAT A-B]	Yellow / YouTube / Repeat
[SCREEN]	Blue / Screen	[Prime Video RANDOM]	Blue / Prime Video / Random
[TV/TXT]	Setup / TV/Txt	[OPT-TOOLS]	Setup / OPT /
[CANCEL]	D-Menu /	[TOP MENU]	D.Menu / Top

Originalfernbedienung    Ersatzfernbedienung

[REVEAL TITLE]	Title / Reveal	[SHIFT + TITLE SOUND]	Shift + Sound / Title
[PRO]	PRO	[SHIFT + MEDIA DISPLAY]	Shift + Display / Media
[HOLD LAN]	LAN / Hold	[SHIFT + LIST SMART]	Shift + Smart / List
[SIZE A-B]	Size / A-B	[SIZE ZOOM]	Zoom / Size
[SUBPAGE GOTO]	Goto / Subpage	[GOTO TEXT]	Text / Goto
[INDEX SLOW]	Index / Slow	[ANGLE INFO]	Info / Angle



Cancel

Menu