 



 
 
 
 
 
 
 

 



 






 

 
 


 

 


 
 
 
 

 


 
 


 



 

 
 


 

 

 
 

 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	Open/Close		Eject
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Dolby PL		Dual
	DSP/EQ		Guide
	I<<<		I<<<

Originalfernbedienung Ersatzfernbedienung

	>>I		>>I
	<<		<<
	>>		>>
	Stop		Stop
	Play		Play
	Pause		Pause
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Repeat		Text
	Tuning+		Ch +
	Tuning-		Ch -
	Disc Menu		D. Menu
	Menu		Menu
	Title Menu		TV/R
	Tools		Options
	Info		Info





Originalfernbedienung Ersatzfernbedienung

 



 

 
 
 

 
 
 








 

 
 


 
 



 

	Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Red		Red
	Green/Tuner		Green
	Yellow/MO/ST		Yellow
	Blue/CD Ripping		Blue
	Dimmer		Subt
	S.Vol		Format
	P.Bass/Audio Upscale		3D

Originalfernbedienung Ersatzfernbedienung








 
 

 

 
 
 
 

 

 

 
 
 

 
 



 

 
 





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Function Tv		AV
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	<<		<<
	>>		>>
	Stop		Stop
	Play		Play

**Originalfernbedienung    Ersatzfernbedienung**

	Pause		Pause
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Tools		Options
	Info		Info
	Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Red		Red





Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung