
 














 









 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Red/Rec/Instant		Red
	Green/<<		Green
	Yellow/Stop		Yellow
	Blue/play		Blue
	White/>>/□		>>
	>◆		D. Menu
	[   ]		Guide
	[o]/Timer		Sleep
	[?]		Eject
	[◆]		Format
	[≡]/Text		Text
	Menu		Menu
	OK		Ok
	Up		Up
	Down		Down
	Right		Right


 

 
 

 




 




 

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P<P		Pre Ch





Originalfernbedienung Ersatzfernbedienung

	[i+]		Info
	I-II		Dual
	[> <]		Subt
	[1 2]		3D
	[ ]>		AV
	Smart		Smart
	[ ] Smart		Media
	[ <> ]		Back
	[-o-]/Active Control		Options

Originalfernbedienung Ersatzfernbedienung


 

 



 

 
 





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Red/Rec/Instant		Red
	Green/<<		Green
	Yellow/Stop		Yellow
	Blue/Play		Blue
	White/>>/□		>>
	[o]/Timer		Sleep
	[?]		Eject
	[♦]		Format
	[≡]/Text		Text
	Menu		Menu
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +

**Originalfernbedienung    Ersatzfernbedienung**

	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P<P		Pre Ch
	[i+]		Info
	I-II		Dual





**Originalfernbedienung   Ersatzfernbedienung   Originalfernbedienung   Ersatzfernbedienung**

	[> <]		Subt		
	[1 2]		3D		
	[ ]>		AV		
	♪ Smart		Smart		
	[ ] Smart		Media		
	[ <> ]		Back		
	[-o-]/Active Control		Options		





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Red/Rec/Instant		Red
	Green/<<		Green
	Yellow/Stop		Yellow
	Blue/Play		Blue
	White/>>/□		>>
	[o]/Timer		Sleep
	[?]		Eject
	[♦]		Format
	[≡]/Text		Text
	Menu		Menu
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P<P		Pre Ch
	[i+]		Info
	I-II		Dual





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	[> <]		Subt				
	[1 2]		3D				
	[ ]→		AV				
	♪ Smart		Smart				
	[ ] Smart		Media				
	[ <> ]		Back				
	[-o-]/Active Control		Options				

