



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	AQT/Auto/Open/CI		Eject / Surround
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	List/Angle		Smart / List
	Aspect		Shift + Picture / Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Back		Back / Return

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	Audio		Audio / Lang I/II
	CH-		CH- / Page-
	Sub-T		Subtitle / EQ
	Menu		Menu / Home
	[i+]/Info		Info / Angle
	Input		AV / Input / RDS
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	DVD Setup		Shift + 2



