 


 




 











 





 


 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Guide		Guide
	[]		3D
	Teletext		Text
	Subtitle		Subt
	AV		AV
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Menu/Exit		Menu
	Options		Options
	Back		Back
	Info		Info
	Up		Up
	Down		Down
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





Originalfernbedienung Ersatzfernbedienung

	MPEG/Cancel		Exit
	[<>]		Format

Originalfernbedienung Ersatzfernbedienung

