

 

 

 

 

 

 

 

 

 

 







 

 




 








 

 

 


 
 





 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Info		Info / Angle
	Lang		Audio / Lang I/II
	Mute		Mute / Dimmer
	[...]		Subtitle / EQ
	♥		Fav / Marker / PC
	▲		Shift + Up
	[≡]		Text / Goto
	EPG		Guide / EPG / -/--
	▼		Shift + Down
	Menu		Menu / Home
	CH+		CH+ / Page+
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	Vol-		Vol-
	OK		OK


 

 
 

 

 
 


 

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Vol+		Vol+
	List		Smart / List
	CH-		CH- / Page-
	Down		Down
	←		Back / Return
	1		1
	2		2
	3		3
	[<>]		Picture / Format
	4		4
	5		5
	6		6
	TV/R		TV/Radio /
	7		7
	8		8
	9		9





Originalfernbedienung Ersatzfernbedienung

	0		0
	<<		<< / Preset-
	<<		<< / Tune-
	>>		>> / Tune+
	>>		>> / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Red/Timer		Sleep / Timer
	Red/Timer		Red / Netflix / Search
	Eject		Eject / Surround
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

