
 
 

 

 



 




 

 
 
 


















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|--------|
|  | Standby |  | Power |
|  | PVR Rec |  | Rec |
|  | PVR List |  | List |
|  | Mute |  | Mute |
|  | EPG |  | Guide |
|  | Audio |  | Dual |
|  | Info |  | Info |
|  | DTV/VCR |  | Smart |
|  | TTX |  | Text |
|  | Subtitle |  | Subt |
|  | Menu |  | Menu |
|  | Exit |  | Exit |
|  | Tv/Radio |  | TV/R |
|  | Favourite |  | Pre Ch |
|  | CH+ |  | Ch + |
|  | CH- |  | Ch - |
|  | Up |  | Up |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-------|
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Recall |  | Back |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--------|--|--------|
| | Goto | | 3D |
| | << | | << |
| | >> | | >> |
| | I<< | | I<< |
| | >>I | | >>I |
| | Play | | Play |
| | Pause | | Pause |
| | Stop | | Stop |
| | RPT | | Media |
| | Red | | Red |
| | Green | | Green |
| | Yellow | | Yellow |
| | Blue | | Blue |
| | | | |
| | | | |
| | | | |
| | | | |


Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |


 
 
 




 

 
 
 














Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|--------|
|  | Standby |  | Power |
|  | PVR Rec |  | Rec |
|  | PVR List |  | List |
|  | Mute |  | Mute |
|  | EPG |  | Guide |
|  | Audio |  | Dual |
|  | Info |  | Info |
|  | DTV/VCR |  | Smart |
|  | TTX |  | Text |
|  | Subtitle |  | Subt |
|  | Menu |  | Menu |
|  | Exit |  | Exit |
|  | Tv/Radio |  | TV/R |
|  | Favourite |  | Pre Ch |
|  | CH+ |  | Ch + |
|  | CH- |  | Ch - |
|  | Up |  | Up |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-------|
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Recall |  | Back |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--------|--|--------|
| | Goto | | 3D |
| | << | | << |
| | >> | | >> |
| | I<< | | I<< |
| | >>I | | >>I |
| | Play | | Play |
| | Pause | | Pause |
| | Stop | | Stop |
| | RPT | | Media |
| | Red | | Red |
| | Green | | Green |
| | Yellow | | Yellow |
| | Blue | | Blue |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

