






 















 

 





Originalfernbedienung Ersatzfernbedienung

<<		<< / Tune-
>>		>> / Tune+
I<<		I<< / Preset-
>>I		>>I / Preset+
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
		Power
		Info / Angle
		Mute / Dimmer
		1
		2
		3
		4
		5
		6
		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	[≡?]/Source		Eject / Surround
	0		0
	O)/I/II/Audio		Audio / Lang I/II
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	CH+		CH+ / Page+
	Index		Display / Media
	Vol+		Vol+
	CH-		CH- / Page-
	List		Smart / List



